



Samsung Flip WMFX

Professional Installation, Setup & Deployment Guide

COMMERCIAL DEPLOYMENT GUIDE

Designed for schools, meeting rooms and commercial installations. This guide expands on Samsung's documentation with practical installation checks, deployment tips and common issues encountered during real-world installations.

Guide Contents

✓	Unpack & Inspect
✓	Mount & Ventilation
✓	Network & Cabling
✓	Touch & HDMI Testing
✓	Wireless Sharing
✓	Support Checklist

Step 1 – Check Everything is Included

Before starting, ensure you have:

- ✓ Samsung Flip Pro display
- ✓ Power cable
- ✓ 2 x Samsung touch pens
- ✓ USB Touch cable
- ✓ Wall mount or mobile stand (if purchased separately)

If anything is missing, stop before installation.

Step 2 – Install the Display

Install using two people or professional installers. Leave at least 10 cm ventilation around the display. Avoid direct sunlight, heaters and blocked vents.

Step 3 – Connect the Cables

Minimum: Power.

Recommended: LAN.

Optional: HDMI to PC.

IMPORTANT

IMPORTANT: Connect the USB TOUCH cable if you want touch control of a connected computer.

Step 4 – Connect to the Network

Connect Ethernet (recommended) or Wi-Fi. Configure language, network and internet access.

Step 5 – Power On

Press the power button once to start. Hold it to power off.

Step 6 – First Time Setup

Choose language, region, date/time, accept terms and allow any software updates.

Step 7 – Update Software

Settings → Support → Software Update. Install updates before handing over the display.

Step 8 – Test Touch

Open Whiteboard and write with the supplied pen. If using a PC, confirm touch controls the PC. If not, check the USB TOUCH cable.

Step 9 – Test HDMI

Connect a laptop via HDMI and select the HDMI source. Confirm picture and touch.

Step 10 – Test Wireless Sharing

Test SmartView+, AirPlay or Screen Share depending on your environment.

Step 11 – Test Audio

Play media and verify speakers and volume.

Step 12 – Daily Care

Store the magnetic pens on the side of the display. Use only the supplied pen. Clean using a soft slightly damp cloth followed by a dry cloth.

Common Installation Mistakes

USB TOUCH cable not connected (touch won't work on PC).

Display not connected to the network.

Wrong HDMI input selected.

Using a USB-C cable that only charges and does not support video.

Before You Call Support

- USB TOUCH cable connected for external PC touch.
- LAN or Wi-Fi configured.
- Latest firmware installed.
- Touch pen tested in Whiteboard.
- HDMI input verified.
- Wireless sharing verified.

Need help? Scan the QR code to visit the Samsung Flip WMFX page on the Kickstart Computers website.



Installer Record

Customer: _____	Site: _____
Serial Number: _____	Firmware: _____
Installed By: _____	Date: _____